


## U905 Specimen Pass Box Mounting

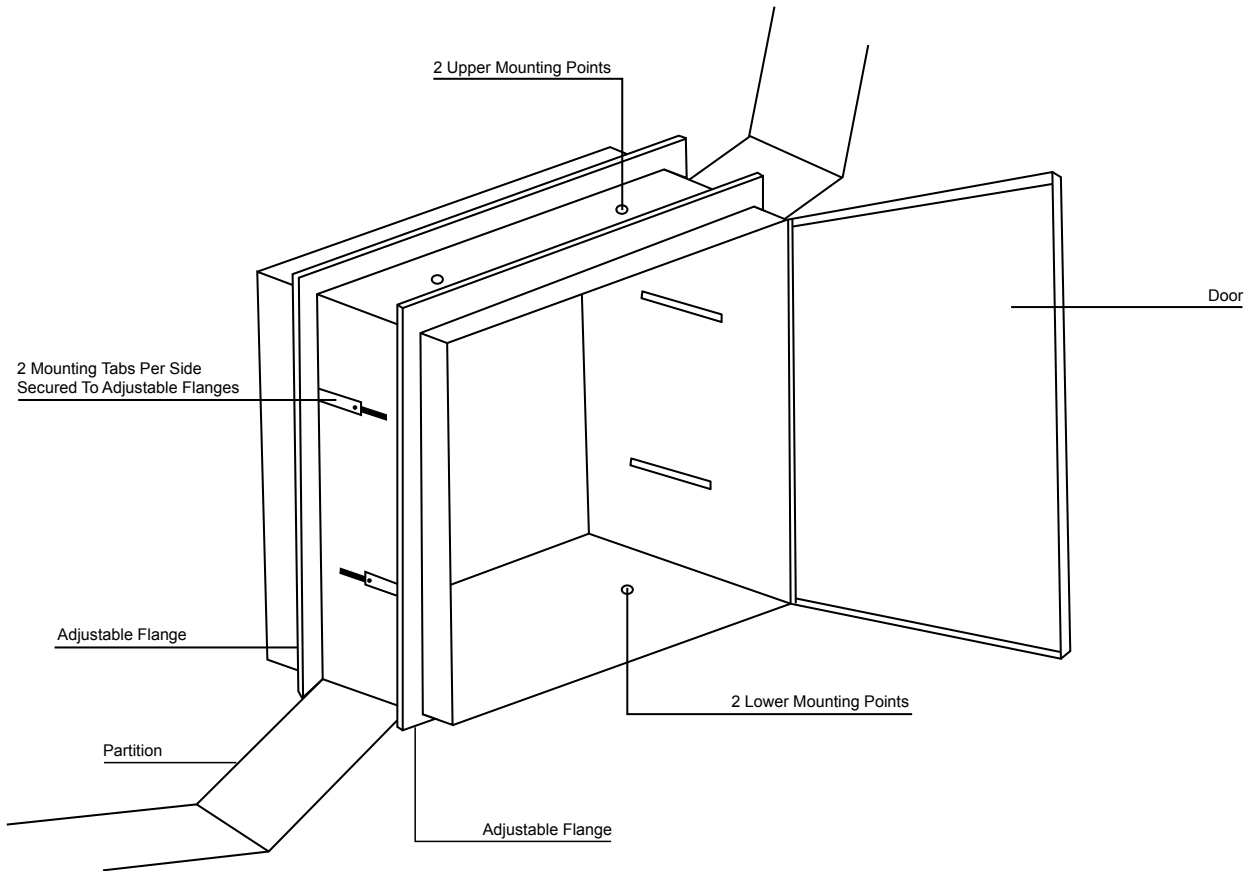

### MOUNTING INFORMATION

- 1) Provide rough wall opening 12 ½" x 12 ½"
- 2) Will accommodate opening 2 ¾"D – 8"D
- 3) Remove adjustable flanges and insert into opening.
- 4) Make sure unit is equally balanced on each side.
- 5) For securing to wall or partition, wood fillers may be required.
- 6) Slide flanges over each side of unit for a snug fit covering wall opening.
- 7) Secure cabinet at upper and lower mounting points. Do not tighten all the way until side tabs are lined up for securing.
- 8) There are 8 mounting points to secure cabinet to opening. All points are secured from the inside of cabinet out.
- 9) Tighten all fasteners evenly making sure unit remains level.
- 10) Shut cabinet door making sure the doors close and open properly.
- 11) If door does not close properly, loosen the fasteners slightly to prevent door from hanging up.
- 12) Test function of doors that allow one door to be opened at all times

\*(Fasteners are not supplied with unit)