



U928

Retractable Shower Seat


Revision 05/14

JOB #:

ITEM #:

QUANTITY:

MOUNTING	HANDING	TYPE	SIZE	OTHER

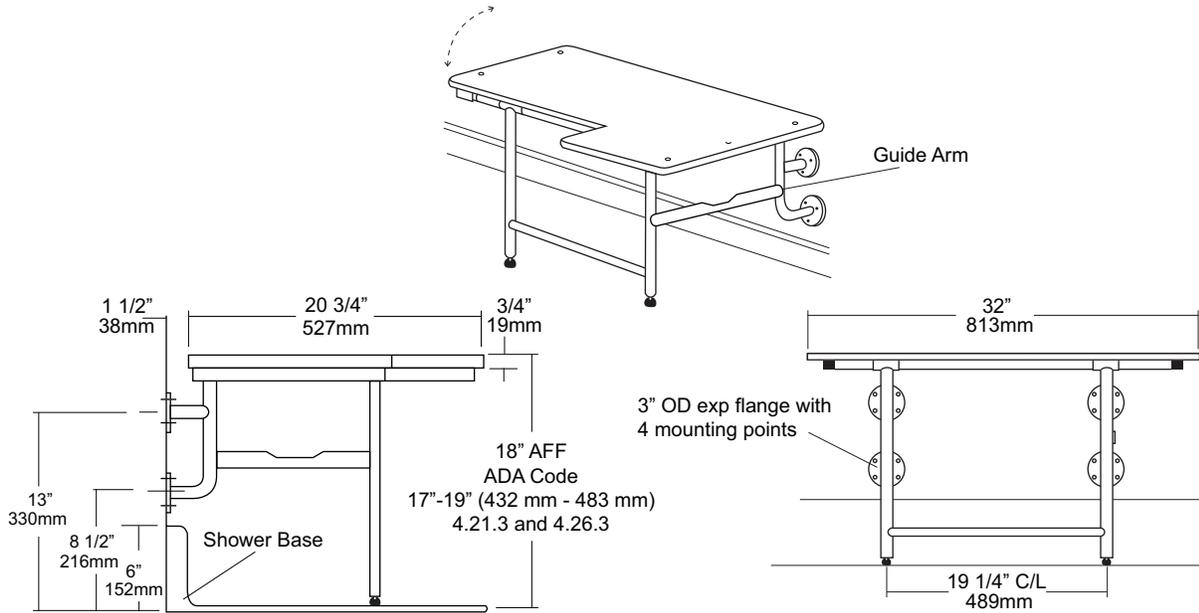

SPECIFICATIONS

Seat: Fabricated of 3/4" thick, one piece polymers (white) with all leading edges having a radius to prevent injury. Seat is secured to frame with carriage bolts and is reversible in field. (Handing not required) Seat is 1 1/2" off finished wall.

Tubing: #18 gauge stainless steel with a #4 satin finish.

Main Frame: #18 ga stainless steel square tubing with capped ends

Flanges: #18 ga stainless steel with four (4) exposed mounting points.

Legs: #18 ga stainless steel with adjustable non slip feet.

Guide Arm: Stainless steel that ensures full extension of support legs when in use and as a guide to raise legs when retracting.

Overall Size: 32"W x 20 3/4"D (seating area)
813mm x 527mm

INSTALLATION

To comply with ADA code, seat should be mounted at a height where the seating location should be at a height of 17" - 19" above finished floor. Check all State and Local code for building requirements. Recommend in wall mounting on all shower seats (BP10) for maximum strength. Place seat up against wall surface making sure seat is at the proper mounting height level. Transfer all mounting point locations and drill pilot holes. Secure seat with proper fasteners for each application. (Fasteners not provided, must be ordered separate) Snugly secure seat and check seat to be level and the raising and lowering of the seat does not bind. When all checks good, finish securing fasteners. When properly mounted seat will support over 500 lbs. To conform with ADA code 4.21.3 and 4.26.3

NOTES

Formerly Model #: U928-TB