



# U145 Soap Dispenser


Revision 03/11

JOB #:

ITEM #:

QUANTITY:

MOUNTING	HANDING	TYPE	SIZE	OTHER

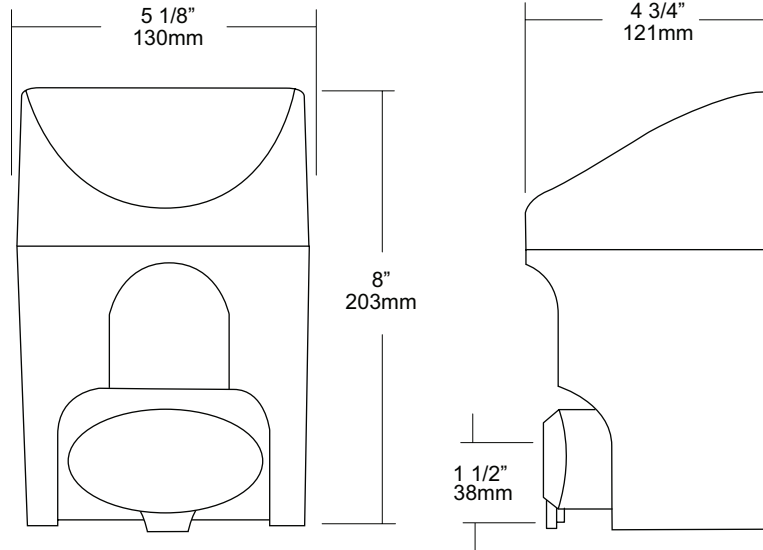

### SPECIFICATIONS

**Body/Tank:** Fabricated of translucent high impact plastic material with a smooth curved design,

**Cover:** Fabricated of high impact white ABS material, Plastic mounting plate secures unit to wall and secures cover to tank. Large convenient filler cap allows easy servicing of dispenser. Special keys are required for this unit.

**Valve:** Fabricated of high impact white plastic material that will dispense most foam soaps. (Foam soaps only for best results) Large push bar allows easy one hand operation that requires less than 5 lbs of force to operate. When properly mounted dispenser will comply with ADA code. Valve can be replaced if damaged.

**Overall Size:** 5 1/8"W x 8"H x 4 3/4"D

**130mm x 203mm x 121mm**

**Capacity:** 800 ml

### INSTALLATION

If mounting on wall surface, transfer mounting hole dimensions from back of unit to wall surface. Drill pilot holes and secure unit to surface with proper fasteners. Sensor cannot be any higher than 40" above finished floor to comply with ADA code.

\*It is not recommended to mount any soap dispenser on mirrors

\*\*For best performance, use pre-mixed low concentrate solutions. Dispensers should have periodic maintenance performed to insure the life of the dispenser. Rinse out bottle and valve with warm water to prevent sludge buildup.

Preventative Maintenance: Each dispenser should be flushed out aprx. Every 30 days with warm water to prevent valve from clogging with old soap. Do not use abrasive cleaners to clean dispenser.

### NOTES