

Semi-Recessed Waste Receptacle

	JOB #:
	ITEM #:
	QUANTITY:

Revision 03/11

MOUNTING	HANDING	TYPE	SIZE	OTHER	
## A S ##	1" TYP. 25mm 30" 762mm 22" 559mm		8 1/4"	4 1/4"	- 2 1/4* - 57mm S
		Removable Extended Waste		-SM	-S2

SPECIFICATIONS

Body: Fabricated of #22 ga stainless steel with #4 satin finish on all exposed areas.

Flange: Fabricated of #22 ga stainless steel finished to match cabinet. One piece construction without miters or welds with 1/4" returns to wall surface for maximum strength.

Back: Fabricated of stainless steel formed for rigidity with multiple welds to cabinet body to form a one-piece construction.

Removable Waste: #22 ga stainless steel with #4 satin finish with hemmed edges and radius corners. Hook tabs allow liner to be installed are an integral part of waste can. Waste is secured in place by tumbler lock and bottom hanger. (12 gallon capacity)

Lock: Pin tumbler, commercial quality, keyed like all other AJW cabinets. **Collars:** #22 ga stainless steel, sized & finished to match cabinet. (Used

for surface mounting & semi-recessing)

Overall Size: 17 1/4"W x 30"H x 8 1/4"D (4" extended waste)

438mm x 762mm x 203mm

Wall Opening: 15 3/4"W x 28 1/2"H x 4"D

400mm x 724mm x 102mm

U410-S2: semi-recessed 2" collar(2" wall open.,51mm)

U410-SM: Surface mounting collar **Waste Capacity:** 12 gallons (1.6 cu ft)

Options:

-VL1: Reusable vinyl liner **-CV:** Covered Waste

INSTALLATION

Coordinate installation with architect and contractor. Provide a wall opening 15 3/4"W x 28 1/2"H . Wall depth will vary if collars are required. Remove waste from cabinet and insert into opening. Secure unit with proper fasteners for each application. Make sure each unit is plumb and true. Secure unit in cabinet by locking in place by tumbler lock. Liners may be installed. (VL1 Re-usable liner)

If semi-recessed cabinets are required see specification for wall depth's.



Semi-Recessed Waste Receptacle

	JOB #:
	ITEM #:
	QUANTITY:

Revision 03/12

MOUNTING HA	NDING	TYPE	SIZE	OTHER
17 1/4" 438 mm 15 1/4" 387 mm	1" TYP. 25mm 30" 762mm 22 3/4" 559mm	8"_203mm	12 1/4"	2 1/4" — S
+s s+		Removable Extended Wast	s	-SM -S2

SPECIFICATIONS

Body: Fabricated of #22 ga stainless steel with #4 satin finish on all exposed areas.

Flange: Fabricated of #22 ga stainless steel finished to match cabinet. One piece construction without miters or welds with 1/4" returns to wall surface for maximum strength.

Back: Fabricated of stainless steel formed for rigidity with multiple welds to cabinet body to form a one-piece construction.

Removable Waste: Fabricated of #22 ga stainless steel with #4 satin finish with hemmed edges and radius corners. Hook tabs allow liner to be installed are an integral part of waste can. Waste is secured in place by tumbler lock and bottom hanger.

Lock: Pin tumbler, commercial quality, keyed like all other AJW cabinets. **Collars:** #22 ga stainless steel, sized & finished to match cabinet. (Used

Collars: #22 ga stainless steel, sized & finished to match cabinet. (Use for surface mounting & semi-recessing)

Overall Size: 17 1/4"W x 30"H x 12 1/4"D (8" ext. waste)

438mm x 762mm x 305mm

Wall Opening: 15 3/4"W x 28 1/2"H x 4"D

400mm x 724mm x 102mm

U412-S2: semi-recessed 2" collar(2" wall open.,51mm)

U412-SM: Surface mounting collar **Waste Capacity:** 18 gallons (2.4 cu ft)

Options:

-VL2: Re-usable vinyl liner-CV: Covered Waste

INSTALLATION

Coordinate installation with architect and contractor. Provide a wall opening 15 3/4"W x 28 1/2"H . Wall depth will vary if collars are required. Remove waste from cabinet and insert into opening. Secure unit with proper fasteners for each application. Make sure each unit is plumb and true. Secure unit in cabinet by locking in place by tumbler lock. Liners may be installed. (VL2 Re-usable liner If semi-recessed cabinets are required see specification for wall depth's.



Semi-Recessed Waste Receptacle

	JOB #:
	ITEM #:
	QUANTITY:

Revision 03/11

MOUNTING HANDI	NG TYPE	SIZE	OTHER	
## HANDI 17 1/4"	1" TYP. 25mm 4" 102mm 30" 762mm	SIZE 12 1/4" 311mm	S S S S S S S S S S S S S S S S S S S	-S6 6 1/4" 159mm -S4 4 1/4" 108mm -S2 2 1/4" 57mm
<u> </u>	Removable Extended Wi		-SM	<u> </u>

SPECIFICATIONS

Body: #22 ga stainless steel with #4 satin finish on all exposed areas.

Flange: #22 ga stainless steel finished to match cabinet. One piece construction without miters or welds with 1/4" returns to wall surface for maximum strength.

Back: stainless steel formed for rigidity with multiple welds to cabinet body to form a one-piece construction.

Removable Waste: #22 ga stainless steel with #4 satin finish with hemmed edges and radius corners. Hook tabs allow liner to be installed are an integral part of waste can. Waste is secured in place by tumbler lock and bottom hanger.

Lock: Pin tumbler, commercial quality, keyed like all other AJW cabinets.

Collars: #22 ga stainless steel, sized & finished to match cabinet. (Used for surface mounting & semi-recessing)

Overall Size: 17 1/4"W x 30"H x 12 1/4"D (4" ext. waste)

438mm x 762mm x 311mm

Wall Opening: 15 3/4"W x 28 1/2"H x 7 1/2"D

400mm x 724mm x 203mm

U413-S2: semi-recessed 2" collar (6" wall open. 152mm)
U413-S4: semi-recessed 4" collar (4" wall open. 102mm)
U413-S6: semi-recessed 6" collar (2" wall open. 51mm)

U413-SM: Surface mounting collar **Waste Capacity:** 21 gallons (2.8 cu ft)

Options:

-VL2: Re-usable vinyl liner-CV: Covered Waste

INSTALLATION

Coordinate installation with architect and contractor. Provide a wall opening 15 3/4"W x 28 1/2"H . Wall depth will vary if collars are required. Remove waste from cabinet and insert into opening. Secure unit with proper fasteners for each application. Make sure each unit is plumb and true. Secure unit in cabinet by locking in place by tumbler lock. Liners may be installed. (VL2 Re-usable liner)

If semi-recessed cabinets are required see specification for wall depth's.



Semi-Recessed Waste Receptacle

	JOB #:
	ITEM #:
	QUANTITY:

Revision 03/11

MOUNTING	HANDING	TYPE	SIZE	OTHER	
## 17 1/4" 438 mm 15 1/4" 387 mm 4	1" TYP. 25 mm 30" 762 mm	21	1/4"	6 1/4"_ 159 mm	-\$4 4 1/4" 108 mm -\$2 2 1/4" 57 mm
-\$	559 mm	Removable Extended Waste	28" ° 28" ° 38" - 46" (965 mm - 1169 mm)	-SM	0

SPECIFICATIONS

Body: Fabricated of #22 ga stainless steel with #4 satin finish on all exposed areas.

Flange: Fabricated of #22 ga stainless steel finished to match cabinet. One piece construction without miters or welds with 1/4" returns to wall surface for maximum strength.

Back: Fabricated of stainless steel formed for rigidity with multiple welds to cabinet body to form a one-piece construction.

Removable Waste: Fabricated of #22 ga stainless steel with #4 satin finish with hemmed edges and radius corners. Hook tabs allow liner to be installed are an integral part of waste can. Waste is secured in place by tumbler lock and bottom hanger.

Lock: Pin tumbler, commercial quality, keyed like all other AJW cabinets.

Collars: Fabricated of #22 ga stainless steel, sized & finished to match

cabinet. (Used for surface mounting & semi-recessing)

Overall Size: 17 1/4"W x 30"H x 8 1/4"D (2" ext. waste)

438mm x 762mm x 210mm

Wall Opening: 15 3/4"W x 28 1/2"H x 6"D

400mm x 724mm x 152mm

U414-S2: semi-recessed 2" collar (4" wall open.102mm) **U414-S4:** semi-recessed 4" collar (2" wall open.51mm)

U414-SM: Surface mounting collar **Waste Capacity:** 12 gallons (1.6 cu ft)

Options:

-VL1: Re-usable vinyl liner-CV: Covered Waste

INSTALLATION

Coordinate installation with architect and contractor. Provide a wall opening 15 3/4"W x 28 1/2"H . Wall depth will vary if collars are required. Remove waste from cabinet and insert into opening. Secure unit with proper fasteners for each application. Make sure each unit is plumb and true. Secure unit in cabinet by locking in place by tumbler lock. Liners may be installed. (VL1 Re-usable liner)

If semi-recessed cabinets are required see specification for wall depth's.





U841Toilet Tissue Dispenser

JOB #:
ITEM #:
QUANTITY:

Revision 03/11

MOUNTING	HANDING	TYPE	SIZE	OTHER

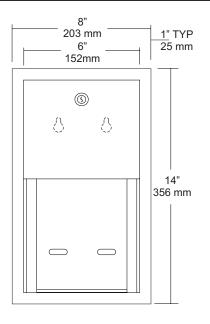

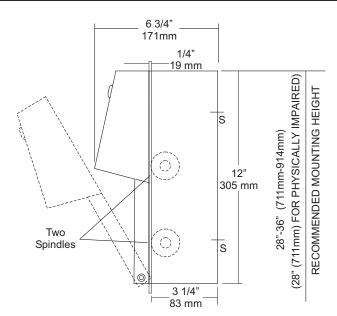

SPECIFICATIONS

Body: Fabricated of #22 ga stainless steel with #4 satin finish. Concealed inner dispensing mechanism is #18 ga stainless steel.

Back: Fabricated of #18 ga stainless steel with multiple welds to cabinet body forming a one piece construction.

Hood: Fabricated of #18 ga stainless steel finished to match cabinet body. Hood is secured with stainless steel hinge rivets to cabinet body. Top roll of tissue will not drop down unless the bottom roll has been depleted. When unit is closed, this will provide a theft resistant, non-control operation and reduce vandalism.

Flange: One piece construction without miters or welds fabricated of #22 ga stainless steel, with#4 satin finish to match cabinet.

Locks: Pin tumbler, commercial quality locks keyed like all other AJW cabinets.

Spindles: (U005) Fabricated of one-piece molded high impact black ABS material

Overall Size: 8"W x 14"H x 6 3/4"D **203mm x 356mm x 171mm**

Wall Opening: 6 3/8"W x 12 3/8"H x 3 5/8"D

162mm x 314mm x 93mm

Capacity: Two standard rolls with a 5 1/4" (133mm) OD.

INSTALLATION

Coordinate installation with architect or contractor to avoid pipes, vents, etc. Provide a rough wall opening in mounting surface at desired or specified location. Open cabinet, remove spindles and insert into opening. Secure unit with proper fasteners per each application. Load toilet tissue on rollers, place in concealed track and close hood. Raise lower roll against upper and take hand away. Lower roll should fall into place with upper roll remaining up above the hood line. If loaded properly, top roll will not fall for use until bottom roll has been depleted. When servicing dispenser, full rolls must be used on both spindles to insure proper operation.

To meet ADA code, dispensers cannot have any type of control delivery. (4.16)

NOTES

Formerly Model #: U841A



U842 Toilet Tissue Dispenser


JOB #:


ITEM #:


QUANTITY:

Revision 03/11

MOUNTING HANDING TYPE SIZE OTHER

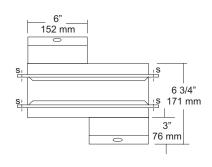

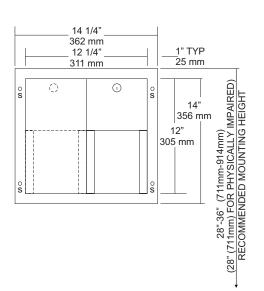

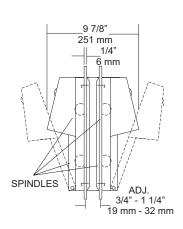

SPECIFICATIONS

Body: Fabricated of #22 ga stainless steel with #4 satin finish. Concealed inner dispensing mechanism is #18 ga stainless steel.

Back: Fabricated of #18 ga stainless steel with multiple welds to cabinet body forming a one piece construction.

Hoods: Fabricated of #18 ga stainless steel finished to match cabinet body. Hood is secured with stainless steel hinge rivets to cabinet body. Top roll of tissue will not drop down unless the bottom roll has been depleted. When unit is closed, this will provide a theft resistant, non-control operation and reduce vandalism.

Flanges: One piece construction without miters or welds fabricated of #22 ga stainless steel,#4 satin finish. Adjustable to fit 3/4" - 1 1/4" thick

Locks: Pin tumbler, commercial quality locks keyed like all other AJW cabinets

Spindles: (U005) Fabricated of one-piece molded high impact black ABS material

Overall Size: 14 1/4"W x 14"H x 9 7/8"D

362mm x 356mm x 251mm Wall Opening: 12 1/2"W x 12 1/4"H

318mm x 311mm

Capacity: Four standard rolls with a 5 1/4" (133mm) OD.

INSTALLATION

Coordinate installation with architect or contractor. Provide a rough wall opening in mounting surface at desired or specified location making sure unit will be level. Open cabinet, remove spindles and adjustable flange. Insert into opening and secure unit with proper fasteners per each application. Secure adjustable flange with proper fasteners. Load toilet tissue on rollers, place in concealed track and close hood. Raise lower roll against upper and take hand away. Lower roll should fall into place with upper roll remaining up above the hood line. If loaded properly, top roll will not fall for use until bottom roll has been depleted. Follow same procedure for both sides. When servicing dispenser, full rolls must be used on both spindles to insure proper

Toilet Paper Dispensers: All dispensers that are to meet ADA code cannot have any type of controlled delivery. (4.16)

NOTES

Formerly Model #: U842A





U850 Seat Cover Dispenser

JOB #:
ITEM #:
QUANTITY:

Revision 03/11

MOUNTING	HANDING	ITPE	SIZE	OTHER	
1	17 1/	4"	I		
	139 n			2 5/8"	

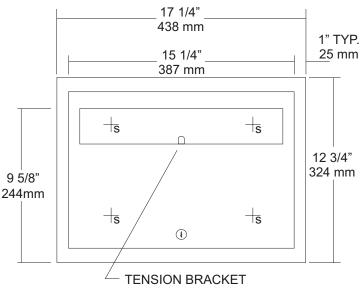

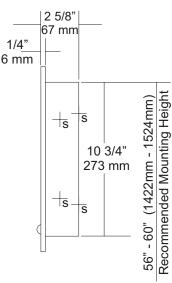

SPECIFICATIONS

Body: Fabricated of #22 gauge stainless steel with a #4 satin finish on all exposed surfaces.

Flange: #22 gauge stainless steel with 1/4" returns to wall without any miters.

Door: Fabricated of #22 gauge stainless steel with a #4 satin finish. **Locks:** Pin tumbler, commercial quality locks keyed like all other AJW cabinets.

Overall Size: 17 1/4"W x 12 3/4"H x 2 5/8"D

438mm x 324mm x 68mm

Wall Opening: 15 3/4"W x 11 1/4"H x 2 3/8"D

400mm x 286mm x 60mm U850-SM: Surface mounted unit **Capacity:** 500 seat covers

INSTALLATION

Provide required wall opening at desired or specified location with coordination with architect or contractor to avoid interference with pipes, vets, etc. Unlock cabinet and place unit in opening. Secure to rough framing with proper fasteners per each application. Fill dispenser with product and secure cabinet door.



Uni-Door Seat Cover Dispenser

	JOB #:
	ITEM #:
	QUANTITY:

Revision 05/11

MOUNTING	HANDING	TYPE	SIZE	OTHER	
-	17 1/2"445 mm 15 1/4"387 mm			2 5/8"	2 5/8" 67 mm
9 5/8"	+s	$+_{\overline{S}}$	13 1/4" 337 mm	+s s (mm H273 mm) 10 3/4" 273 mm 1-10 273	+ _S −s
244mm	+5	$+_{s}$		6" - 60" (1422 mm - 1	 <u> </u>
	igsel TENSION BRA	CKET		- <u> </u>	-SM

SPECIFICATIONS

Body: Fabricated of #22 gauge stainless steel with a #4 satin finish on all exposed surfaces.

Flange: #22 gauge stainless steel with 1/4" returns to wall without any miters.

Uni-Door: #18 ga stainless steel door. Seat cover dispensing area (on both units) are deburred and polished smooth to avoid paper tearing and injury.

Hinge: Full length, stainless steel piano type hinge.

Lock: Pin tumbler commercial quality, keyed like all other AJW cabinets.

Overall Size: 17 1/2"W x 13 1/4"H x 2 5/8"D

445mm x 337mm x 68mm

Wall Opening: 15 3/4"W x 11 1/4"H x 2 5/8"D

400mm x 286mm x 60mm U8504-SM: Surface mounted unit Capacity: 500 seat covers

INSTALLATION

Provide required wall opening at desired or specified location with coordination with architect or contractor to avoid interference with pipes, vets, etc. Unlock cabinet and place unit in opening. Secure to rough framing with proper fasteners per each application. Fill dispenser with product and secure cabinet door.